


WHISPER WATER FOUNTAIN



Thank you for your purchase of an All Fur You Whisper Water Fountain.

In order to ensure the safe operation and maximum life of your product, please take the time to read these instructions before use and store for future reference.

COMPONENTS:

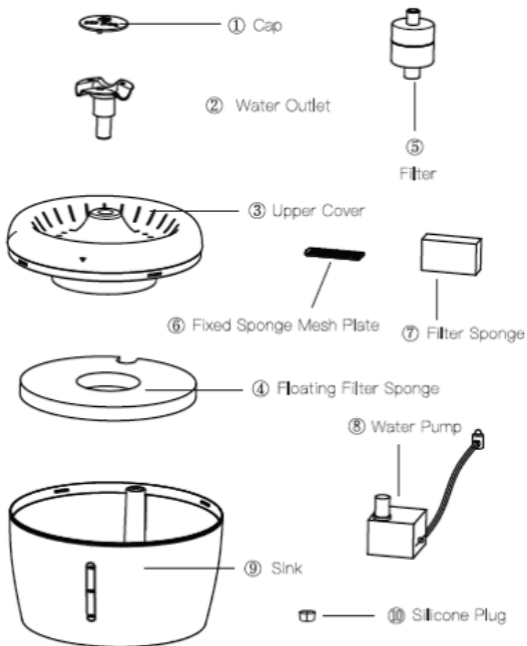

PRODUCT SPECIFICATIONS:

Product Name: Whisper Water Fountain

Output Voltage: 5V

Power Consumption: 2W

Pump: Ultra Low Noise DC Pump

Input: USB cable

Product Dimensions: Circular base

205mm (W) x 183mm (H)

8 in (W) x 7.2 in (H)

Product Weight: 0.9kg (2 lb)

Cord Length: 1.5m (1.6 yd)

Material: High Gloss Anti Bacterial PP Resin

Filtration System: coconut shell activated carbon filter
and plasma exchange resin filter

Capacity: 2.5L (84 oz)

PLEASE NOTE:

For indoor use only

Try to avoid the possibility of the plug, cable and power outlet getting wet

If possible place the power adapter higher than the unit

Replace any frayed or chewed USB cables


Place the fountain on a protective surface or mat to avoid spillage

PUMP MAINTENANCE:

To ensure the maximum life of your pump, cleaning is very important.

We suggest a simple clean every two weeks.

1. *Open the pump cover*
2. *Using a coin, a key or fingernail remove the bottom impeller cover*
3. *Remove the impeller and wash the parts in dishwashing liquid with warm water.*

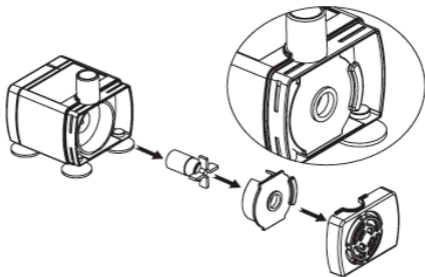

WATER FOUNTAIN MAINTENANCE:

** Avoid the USB port when cleaning your device.

Use a soft cloth or sponge together with mild detergent to clean the inside and outside of your fountain.

Use only fresh water to wash the sponge filter, avoid detergents

Never use hot water, gasoline, alcohol or organic solvents to clean the water dispenser.



All Fur You is a brand proudly brought to you by Select Trading Pty Ltd



allfuryou.com



[/allfuryoupets](https://www.facebook.com/allfuryou)



[@allfuryou](https://www.instagram.com/allfuryou)